


## PIN + RFID Cabinet Lock

### PN-19RF Installation instruction


1) **Make hole in Cabinet door:**

Select appropriate height at which you want to install the lock. The same lock body can be used for right or left side door.

From appropriate distance from the inside wall of the side panel mark a central point. Then 40 mm above this and 40mm below this drill 2 holes of 10 mm each. Make a cutout in front of the connector for the connector wire to pass through. Make sure the connector wire is not damaged while installing.

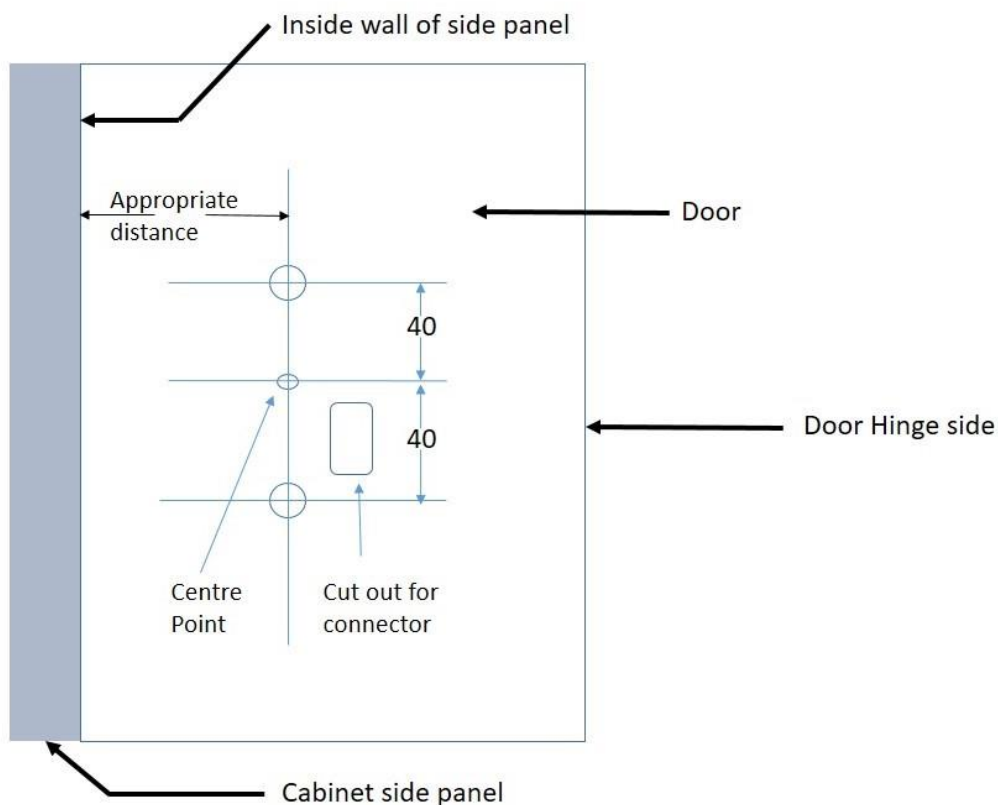

## 2) Install the lock body

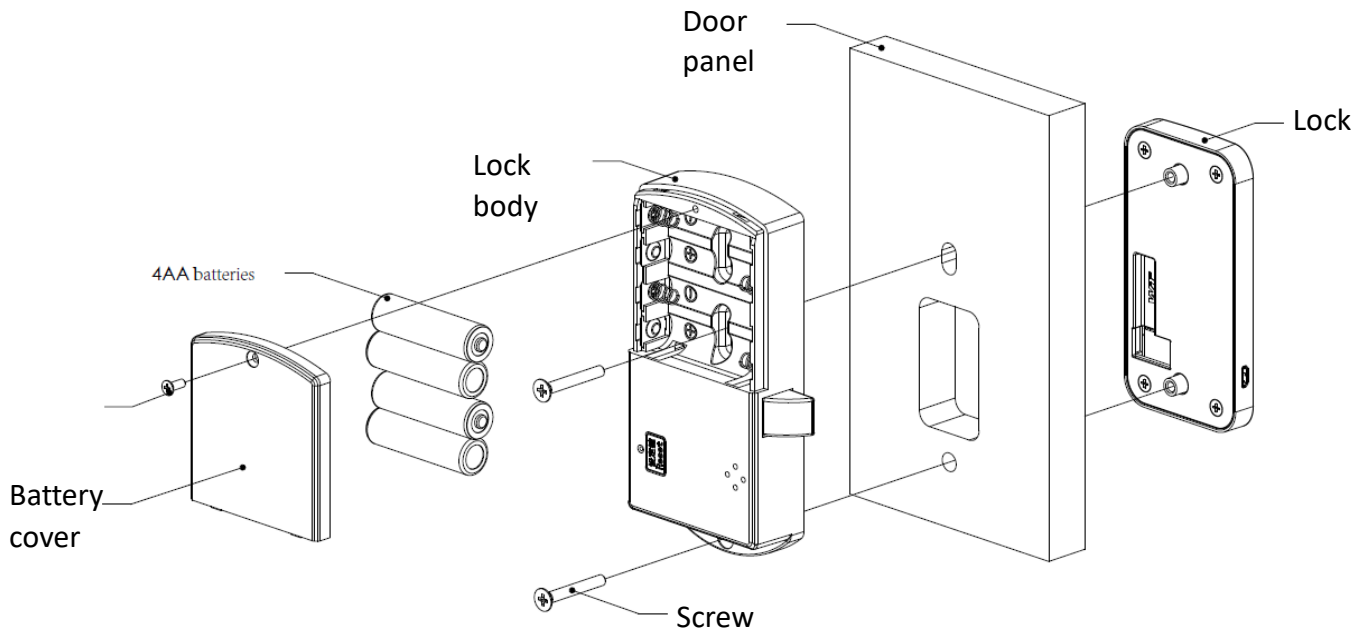

## 4) Fix the side catch:

On the inside wall of the side panel at appropriate height fix the side catch with the 3 4\*16 screws provided. The pushpin will be facing outside.

